外部カメラ用モニター起動マニュアル

Press F1 to run B105 setup	
Nain Processor: Nathematics Co-processor: Display Adapter Type: Serial Ports: Fanailel Ports: Floppy disk drives: Total Conventional IAM:	NEC U28 Intel 0007 SGA-VGA (Video B105 Frenest) COMUI mene; COMUI mome; COMUI mome; LFTL: mome; LFT2: mome Brive 01 1.44 PD, 3.5"; Brive 1: mome 640 K18
Melcome to the BIOS setup Enter command (b for help) BIOS setup commands: f - Change first floppy A p - Change second floppy A p - Change second floppy a - Save changes and exit g - Exit without maving ch	atlity : h in type rive type #mgem



黒い画面が出たら F1 キーを押してください。





起動時(Windows 画面)

Windows の画面が表示されたら 「ログオフ」してください。



←シャットダウンの横「▶」から 「ログオフ」を選択してください。



③ 再ログイン(ログの切替画面)

「HONG-99」を選択してください。



※カメラモニターは「HONG-99」内でのみ 動作します。





(4) モニターアプリ起動

画面左上にあるカメラーモニターアプリの アイコンをクリックしてください。



- ・「接続中…」:表示まで時間がかかる場合があります。
- ・全画面表示は右上の 🖂 拡大ボタンを押してください。